

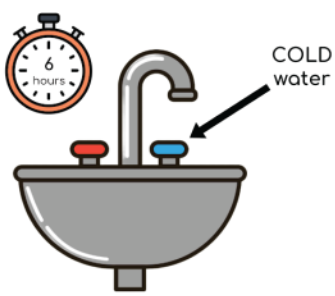


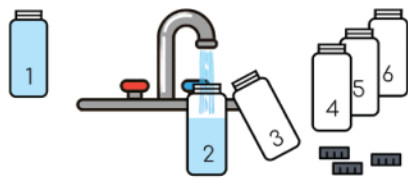
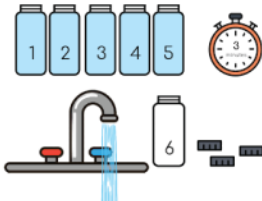
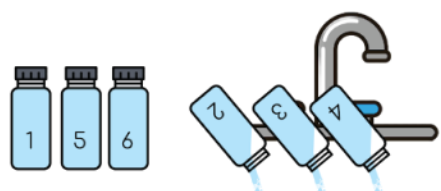

At-Home Water Quality Test Instructions

How-To Video



Tal.gov.com/WaterQualityTest

*Please read ALL instructions before opening your sample bottles.
Do not throw away anything from this kit.*

<h1>1</h1> <p>PREPARE</p>	 <ul style="list-style-type: none">Do not use any water inside or outside your house for at least 6 hours prior to collecting samples. This includes all faucets, toilets, and appliances connected to your home's water.Use the COLD water setting on your faucet for sample collection. Any mounted filter, water softener, iron filter, or reverse osmosis system, must be bypassed or removed from the faucet before sample collection.The best time to collect a sample may be first thing in the morning or after you return home from work.
<h1>2</h1> <p>GATHER</p>	 <ul style="list-style-type: none">Set the bottles in order from 1 to 6 next to the kitchen sink or faucet being used.Open bottles 1, 5, and 6.Do not touch the inside of the bottle or cap.Bottles must be filled to the neck when taking a sample. 
<h1>3</h1> <p>COLLECT</p>	 <ul style="list-style-type: none">Place bottle 1 under the faucet and then turn on the COLD water.While bottle 1 is filling, hold bottle 2 next to bottle 1.When bottle 1 is filled to the neck, immediately move bottle 2 under the stream of water.Repeat the process until bottles 1–5 are filled to the neck. Do not turn off the water while filling the bottles.
<h1>4</h1> <p>COLLECT</p>	 <ul style="list-style-type: none">Do not turn off the water after filling bottle 5.Set a timer and let the water run for 3 minutes.Place bottle 6 under the faucet after 3 minutes.When bottle 6 is filled to the neck, you may turn off the water.
<h1>5</h1> <p>CLOSE</p>	 <ul style="list-style-type: none">Replace caps on bottles 1, 5, and 6.Pour out water from bottles 2, 3, and 4.Fill out submission form.
<h1>6</h1> <p>RETURN</p>	 <ul style="list-style-type: none">Return all six bottles to the box. (This prevents the filled bottles from tipping over and shifting in transit.)Place your completed submission form in the included resealable bag and then place it into the box with the bottles.Once the box is ready, please call 850-891-1200 for pick up.Place the box immediately outside your front door and a technician will pick it up within a few days.You can expect to receive test results within approximately four weeks.